


For half dummy sets, **DO NOT** bore pocket through the entire door! Wood Screws used to hold the flush pulls in place.

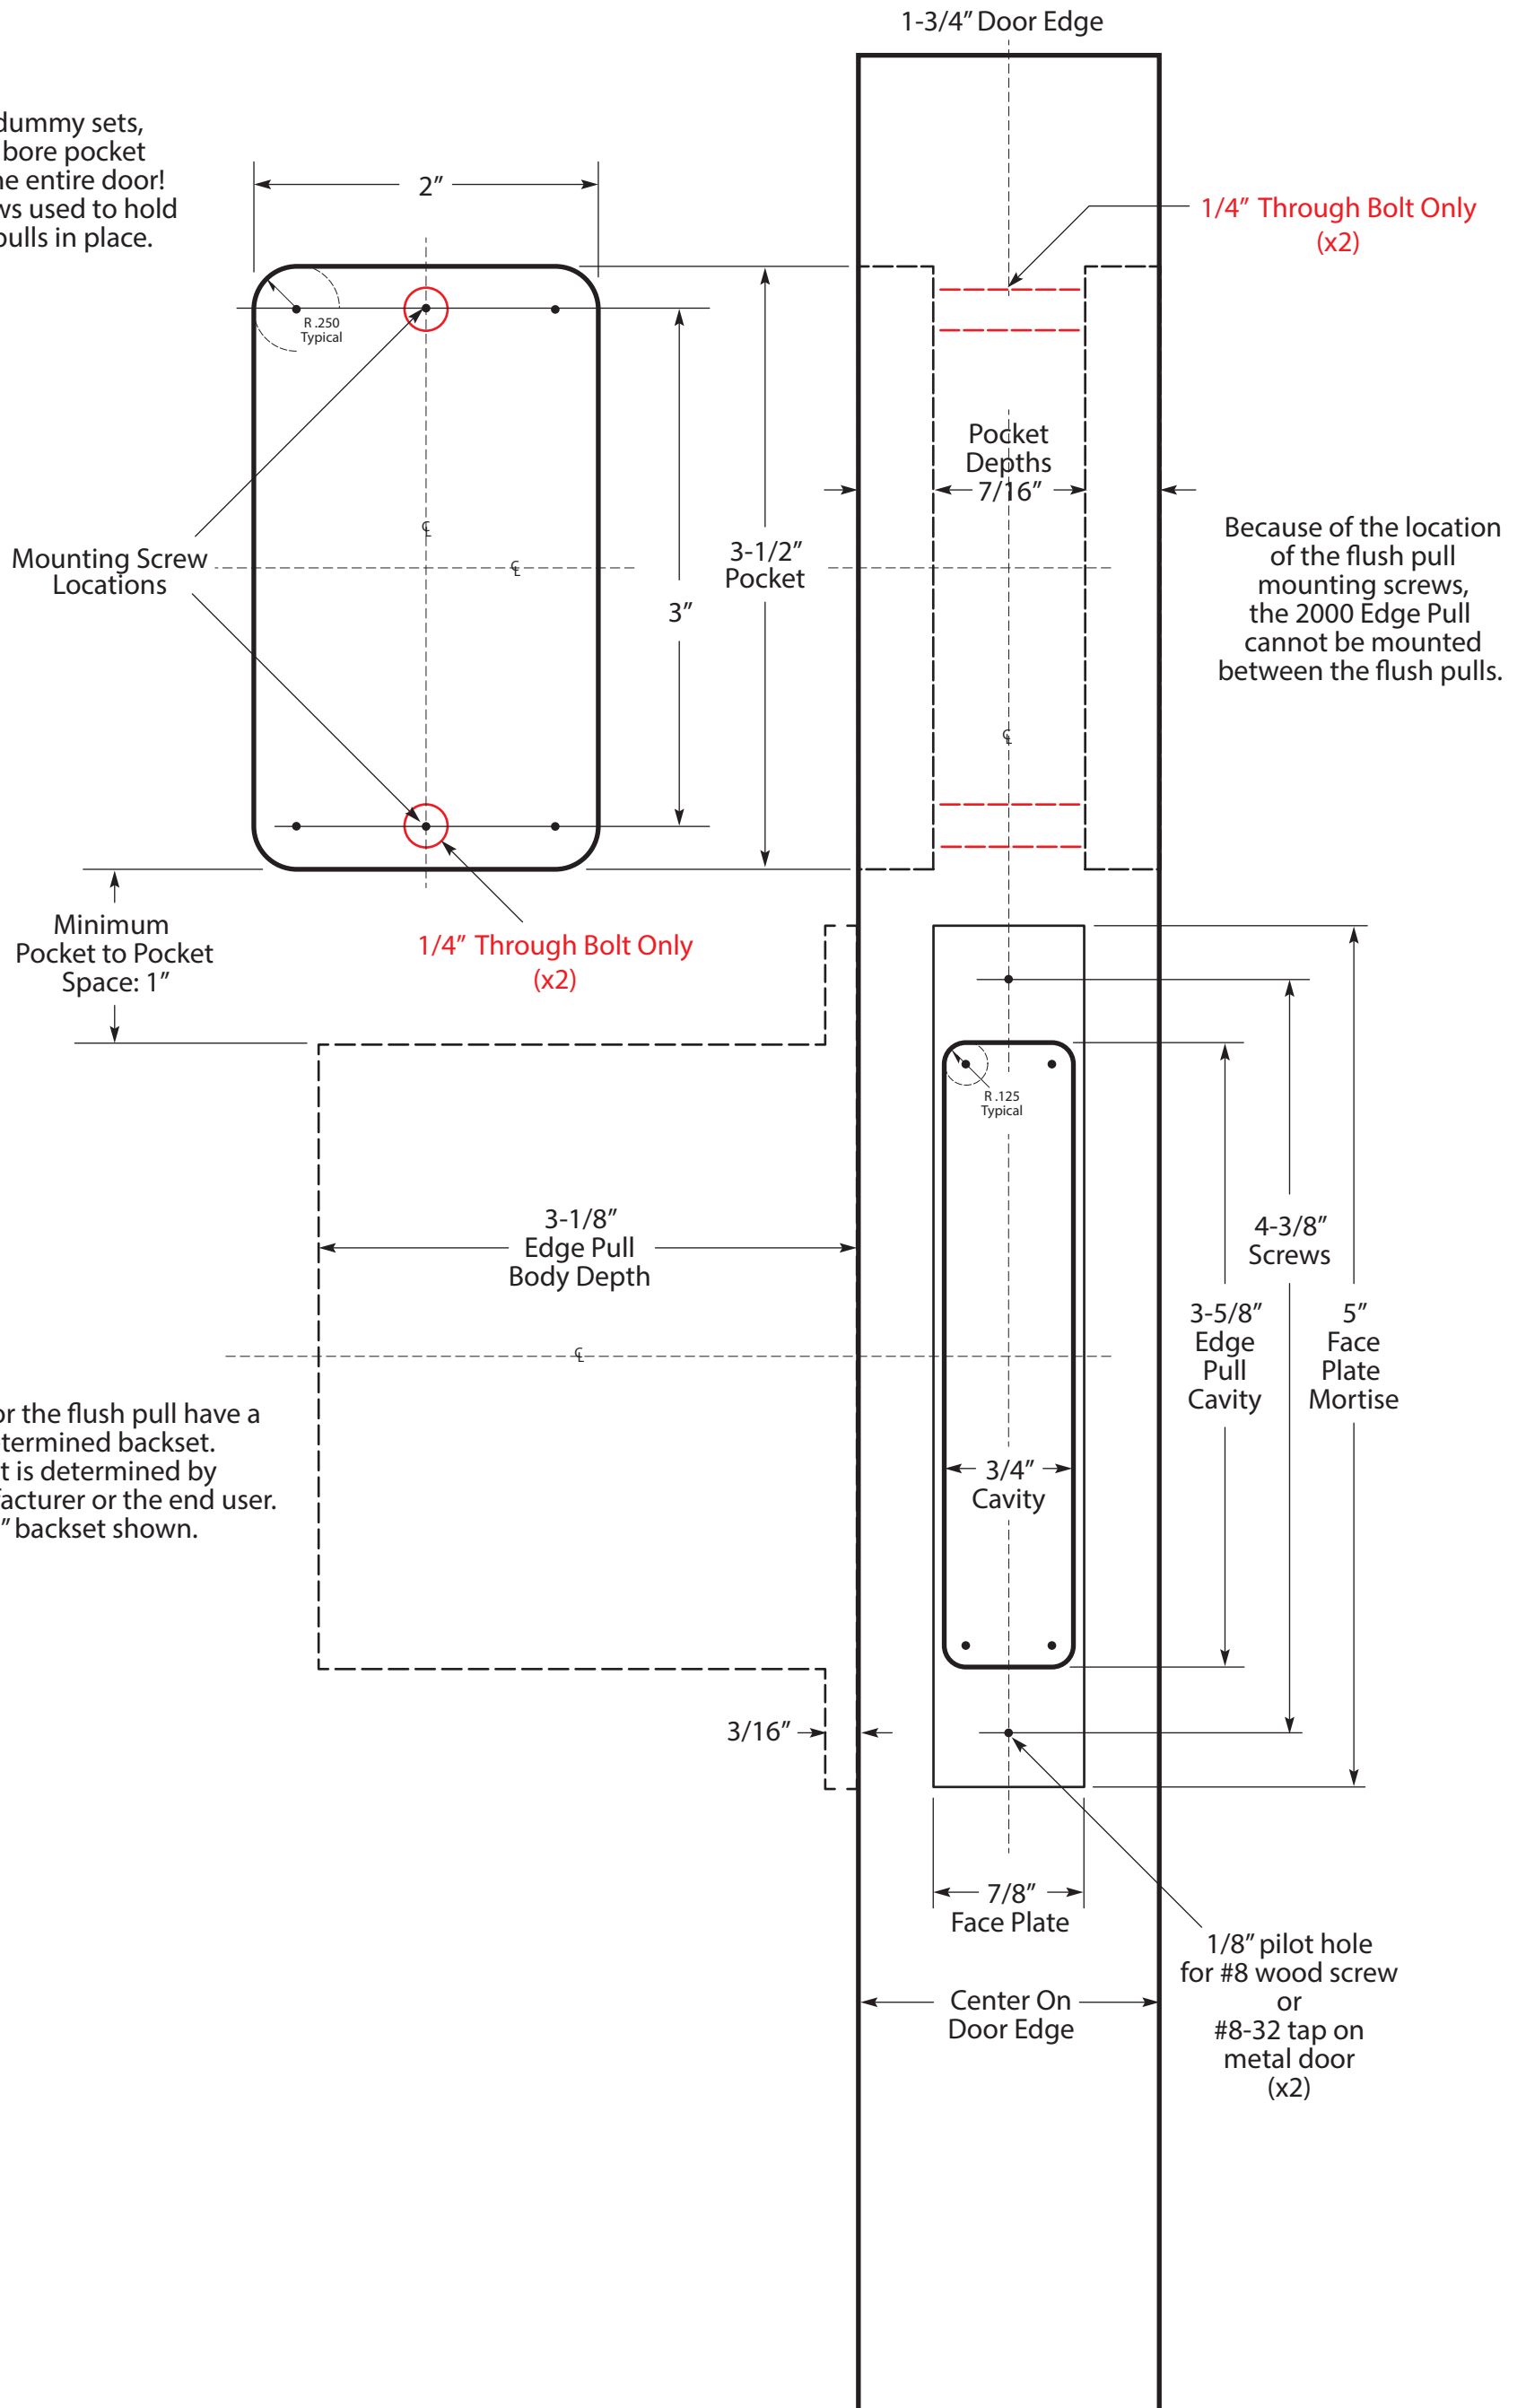

The lock nor the flush pull have a pre-determined backset. Backset is determined by door manufacturer or the end user. 2-1/2" backset shown.